





**EN** Instruction manual



**SMART** CONVECTOR HEATER

01.348320.02.001 & 01.348321.02.001

## PARTS DESCRIPTION

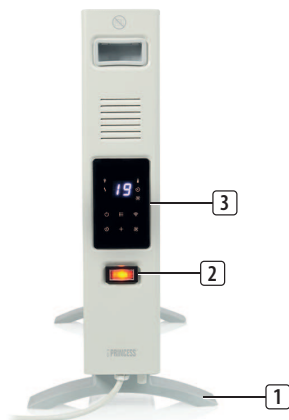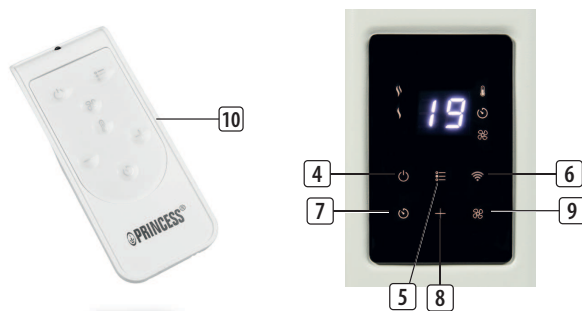

## SAFETY

- By ignoring the safety instructions the manufacturer cannot be held responsible for the damage.
- If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
- Never move the appliance by pulling the cord and make sure the cord cannot become entangled.
- To protect yourself against an electric shock, do not immerse the cord, plug or appliance in the water or any other liquid.
- The appliance must be placed on a stable, level surface.
- The user must not leave the appliance unattended while it is connected to the supply.
- This appliance is only to be used for household purposes and only for the purpose it is made for.
- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given

supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.

- Children shall not play with the appliance.
- Cleaning and user maintenance shall not be made by children without supervision.
- Children of less than 3 years should be kept away unless continuously supervised.
- Children aged from 3 years and less than 8 years shall only switch on/off the appliance provided that it has been placed or installed in its intended normal operating position and they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children aged from 3 years and less than 8 years shall not plug in, regulate and clean the appliance or perform user maintenance.



- **WARNING:** Do not cover

- **CAUTION:** Some parts of this product can become very hot and cause burns. Particular attention has to be given where children and vulnerable people are present.
- In order to avoid overheating, do not cover the heater.
- Do not use this heater in the immediate surroundings of a bath, a shower or a swimming pool.
- Do not use this heater if it has been dropped.
- Do not use if there are visible signs of damage to the heater.
- Use this heater on a horizontal and stable surface, or fix it to the wall, as applicable.
- **WARNING:** Do not use this heater in small rooms when they are occupied by persons not capable of leaving the room on their own, unless constant supervision is provided.
- **WARNING:** To reduce the risk of fire, keep textiles, curtain, or any other flammable material a minimum distance of 1m from the air outlet.
- The heater must not be located immediately below a socket-outlet.



This product complies with conformity requirements of the applicable European Regulations or Directives.



This product complies with conformity requirements of the applicable UK Regulations.



Waste electrical products should not be disposed of with household waste. Please recycle where facilities exist. Check with your Local Authority or local store for recycling advice.

## PARTS DESCRIPTION

1. Legs
2. Power switch
3. Operational panel/ display
4. On/ off button
5. Heat setting button
6. WI-FI button
7. Timer button
8. Temperature "+" button
9. Fan button
10. Remote

## BEFORE THE FIRST USE

- Turn the heater on its side and install the feet by turning them counter clockwise.
- Place the device on a flat stable surface and ensure a minimum of 10 cm. free space around the device. This device is not suitable for installation in a cabinet or for outside use.
- When the device is turned on for the first time, a slight odour will occur. This is normal, ensure adequate ventilation. This fragrance is only temporary and will disappear soon.
- Put the power cable into the socket. Note: Make sure the voltage which is indicated on the device matches the local voltage before connecting the device.

## USE

- Put the plug into a grounded outlet and switch on the device with the main power switch.
- When switched on, the operational panel will display the room temperature.
- The operational buttons are below the display.
- Press power button to on/off the heater.
- Press heat setting button to select between four modes. ( low-level heating / mid-level heating / high-level heating and anti-frost mode.)
- Press Wi-Fi button to connect the device to the app.
- Press timer button to set the device on timer.
- Press "+" + "-" to set the temperature.
- Press fan button to switch on/off the fan in the device.

- Never place objects on the heater, such as clothing or towels. Never use the heater in the bathroom or other wet areas. The air outlets of the heater can be very hot.

## Timer

- This model is fitted with a 24hr timer set using the button on device or by the remote control or by the app.
- Press the timer button first, the display shows 00, the timer indicator lights up. Then press the "+" button multiple times to increase the timer by 1 hour, until it reaches 24:00.
- Press the temperature "+" button to select the desired temperature (default 35°C), the temperature can be adjusted from 5 till 50°C.
- The timer function is enabled after the display flash 5 times.

## Remote Control

- On/ Off button.
- Heat setting button.
- Fan button.
- Heating button.
- Temperature increase button.
- Temperature decrease button.
- Timer button.

## Anti-frost mode

- When the room temperature is decreased below 5°C in stand-by mode, The device automatically switches on until the room temperature reaches 7°C.

## USING THE APPLIANCE WITH THE PRINCESS HOME APP

The item can be used manually with its built-in controls or you can use a smart phone or smart speaker to control it. Before you begin, ensure the Princess Home app is downloaded. The Princess Home app is available on Android and iOS.

Download the correct version of the Princess Home app via our website [princesshome.eu/nl-nl/princess-home-app](http://princesshome.eu/nl-nl/princess-home-app) or use QR:



iOS™



Android™

### Pair your device to Princess Home app

- Make sure the item is powered.
- Press the Wi-Fi button for about 5 seconds until you hear a beep and the Wi-Fi indicator light is flashing rapidly.
- Open the Princess Home app.
- Select your country code, enter the cell phone number and tap "Get" to get a message containing the verification code.
- Enter the verification code in the message and tap "Log in" to log in to the App.

- Click "Add Device" to add a new device.
- Select the device you wanted to connect.
- Follow the instructions on the app to connect the item.

### How to set local time

When the item is connected to the Princess Home App, it will automatically update the local time according to the time on the phone.

### Wi-Fi information

Wireless technology: Wi-Fi

Operating frequency: 2400MHz~2483.5MHz

Max. radio-frequency power: 20 dBm

## CLEANING AND MAINTENANCE

- Before cleaning, unplug the appliance and wait for the appliance to cool down.
- Clean the appliance with a damp cloth. Never use harsh and abrasive cleaners, scouring pad or steel wool, which damages the device.
- Clean the two air outlets (above and below) by using a vacuum cleaner to remove dust from inside.

## DECLARATION OF CONFORMITY

- Hereby, Smartwares Europe declares that the radio equipment type 348320 / 348321 are in compliance with Directive 2014/53/ EU
- The full text of the EU declaration of conformity is available at the following internet address: [www.princesshome.eu/doc](http://www.princesshome.eu/doc)

## ENVIRONMENT



■ This appliance should not be put into the domestic garbage at the end of its durability, but must be offered at a central point for the recycling of electric and electronic domestic appliances. This symbol on the appliance, instruction manual and packaging puts your attention to this important issue. The materials used in this appliance can be recycled. By recycling of used domestic appliances you contribute an important push to the protection of our environment. Ask your local authorities for information regarding the point of recollection.

### Support

You can find all available information and spare parts at [www.princesshome.eu](http://www.princesshome.eu)!



This product is only suitable for well insulated spaces or occasional use.

Wireless technology: Wi-Fi  
Operating frequency: 2400MHz~2483.5MHz  
Max. radio-frequency power: 20 dBm



**smartwares<sup>®</sup>** Europe  
Swaardvenstraat 65 | 5048 AV | Tilburg  
The Netherlands | [www.princesshome.eu](http://www.princesshome.eu)



**smartwares<sup>®</sup>** Safety and Lighting Ltd.  
West Point, Second Floor | Mucklow Office Park  
Mucklow Hill | Halesowen | West Midlands | B62 8DY  
United Kingdom | [www.princesshome.co.uk](http://www.princesshome.co.uk)